



This **Quick Reference Guide** provides the basic steps to get your **VoiceNAV Security System** up and running.

For more detail go to [www.voicenav.com.au](http://www.voicenav.com.au) or refer to your supplied Hills VoiceNAV User Manual

### Changing the Master User Code

**1**  
Touch the MENU key  
VoiceNAV will speak a number of options

**2**  
Touch the 5 key for USER CONFIGURATION

**3**  
When VoiceNAV says 'enter your code' enter the default Master User Code which is 1234

**4**  
Touch the 1 key to configure USER PIN (personal identification number)

**5**  
Touch the 1 key again, then ENTER when prompted to select which User to configure. The first time will be 1.  
VoiceNAV will cycle through 1,2,3 then 4 to indicate the current default code

**6**  
Enter a preferred 4-digit USER PIN or CODE, which cannot start with 0, then touch the ENTER key. The keypad will light up your chosen numbers. Then touch the MENU key three times to exit.

### VoiceNAV Indicator lights & Icons

	Green System is ready. Orange System message present. Red (Flashing) One or more zones are in alarm condition. Red (Steady) System trouble message present.
To hear system messages, touching the status key. IE: If the status icon is lit red (steady), there is a system fault present, this fault will now be announced.	
	Green Area / Areas are all disarmed from the away mode. Red Area / Areas are all armed in either the away or stay mode. Off Function is not available. *If both away and stay are off, this VoiceNav has multi area control
	Green Area / Areas are all disarmed from the stay mode. Orange Area / Areas are all armed in the stay mode. Off Function is not available. *If both stay and away are off, this VoiceNav has multi area control
	Red Mute menu is accessible. Off Mute menu is not accessible. Touch the mute icon to access the mute menu. Touching mute during a system message announcement will cease the m message playing.
	Red Intercom functionality enabled. Also indicates ready to record voice message in main menu 8, voice message recording. Green (flashing) Copying recordings from one VoiceNav to another. *Intercom functionality requires additional cables and programming.
	Access main menu options.
	Enters selected option, use when prompted



### Arm System (exiting home)

**1**  
Close the doors to all protected areas. The STATUS indicator light will currently be GREEN.  
Press Away

**2**  
This will ARM the system, and the AWAY indicator will turn RED. You may exit.

### Disarm System (entering home)

**1**  
As you enter the home, the VoiceNAV keypad will emit a tone until you enter the USER CODE. You have approximately 30 seconds to do this.

**2**  
The AWAY indicator will change from RED to GREEN.  
You have disarmed the system